

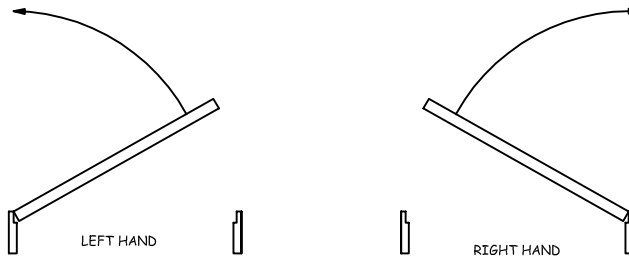


## SHIM INSTRUCTIONS TO CORRECT DOOR FITTING IRREGULARITIES

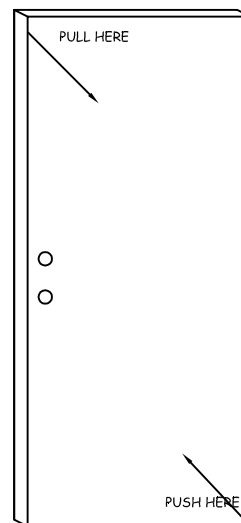

### A) BOTTOM OF DOOR PROTRUDING FROM FRAME

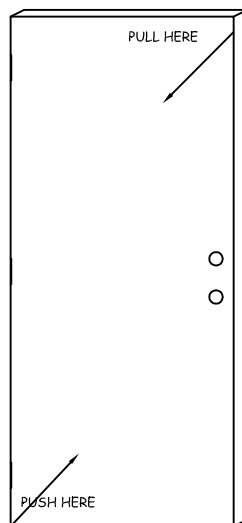

IF THIS BOTTOM CORNER  
IS STICKING OUT

IF THIS BOTTOM CORNER  
IS STICKING OUT

### B) TOP OF DOOR PROTRUDING FROM FRAME

